


## Adapter INSTRUCTIONS for aftermarket Ruger 10/22

### Magazines

1. Choose the correct adapter for your magazine. Put at least one round in your magazine and look how the back of the rimmed cartridge lines up with the centerline of the magazine. It will be either CENTERED (Shooters Ridge, Butler Creek), or OFF-CENTER to the left (Black Dog, RamLine, Eagle).

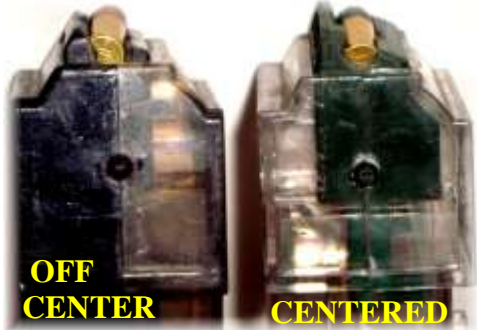

2. Hold the loader in your left hand, and press the adapter lock with your thumb. With your right hand, hook the Mag Adapter into the top of the Lightnin' Grip Loader and swing the bottom into the slot. Take your thumb off of the lock button. It should pop out to the locked position when the adapter is in fully seated.



3. Insert your magazine into the adapter until the small magazine pin hooks under the latch.




Continue to **Lightnin' Grip Loader INSTRUCTIONS**

## Adapter INSTRUCTIONS for aftermarket Ruger 10/22

### Magazines

1. Choose the correct adapter for your magazine. Put at least one round in your magazine and look how the back of the rimmed cartridge lines up with the centerline of the magazine. It will be either CENTERED (Shooters Ridge, Butler Creek), or OFF-CENTER to the left (Black Dog, RamLine, Eagle).

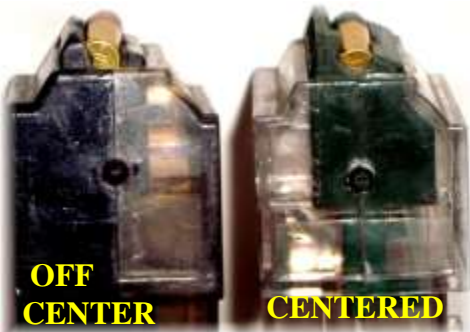

2. Hold the loader in your left hand, and press the adapter lock with your thumb. With your right hand, hook the Mag Adapter into the top of the Lightnin' Grip Loader and swing the bottom into the slot. Take your thumb off of the lock button. It should pop out to the locked position when the adapter is in fully seated.



3. Insert your magazine into the adapter until the small magazine pin hooks under the latch.



Continue to **Lightnin' Grip Loader INSTRUCTIONS**