


This is not an adjustment. This ball retainer should remain fully seated.

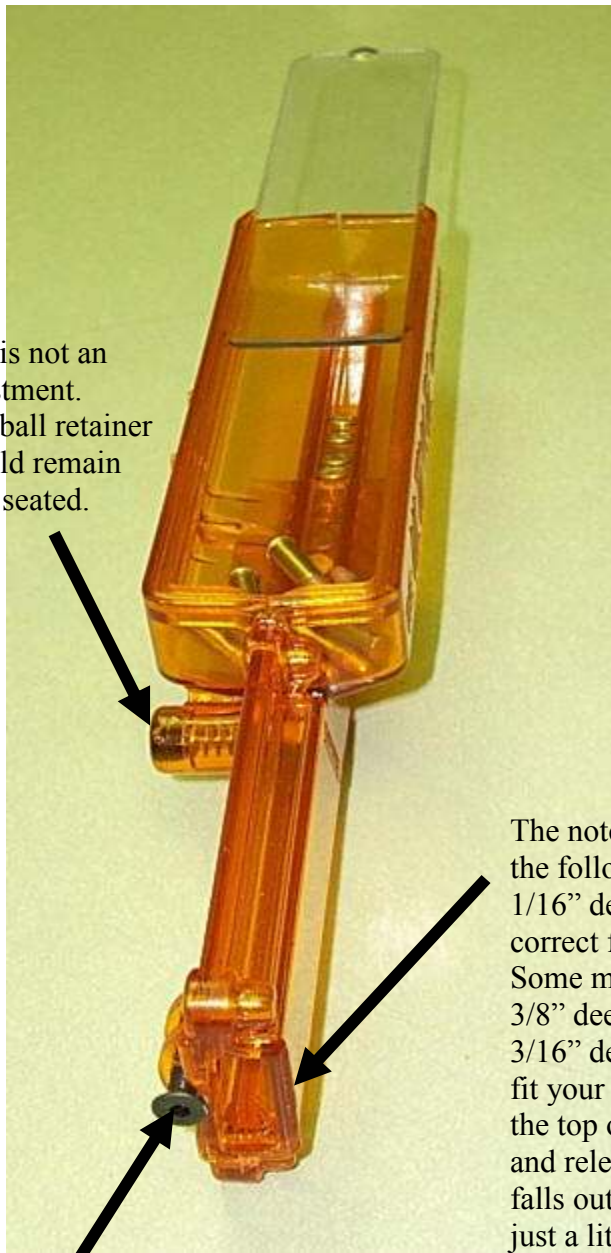

The notch in this area is for magazines with the follower button on the right side. The 1/16" deep notch that comes molded in is correct for most High Standard pistols. Some models require the notch to be carved 3/8" deep. Mark I Rugers need to be about 3/16" deep. Carefully custom fit this area to fit your magazine. Deepen the notch until the top of your magazine touches the ball and releases the rounds. If an extra bullet falls out when the mag is removed, carve just a little deeper to allow the last round to "just" slide under the feed lips of your magazine.

This is the screw that might need adjusted to fully load your mag.

If you have trouble loading all 10 rounds:

- Turn the screw all the way in, and you should be able to load 9 rounds and the 10th may fall out when you remove your magazine.
- Then turn the screw out (ccw) 1/2 turn and try to load your magazine again.
- Keep repeating the above step until the 10th round loads, just sliding under the feed lips of your magazine.
- If the 11th round falls out when you remove your magazine, turn the screw back in (cw) a little.